**OVER-ALL INSTRUCTIONS SHEET** PAGE: 1 of 4


MODEL: S1920, S1921, S1925 / S1900, S1901, S1905 / S1910, S1911, S1915

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.


## **GROUND INSTALLATION REMOTE DRIVER (REM)**


С

- A- UNCLIP THE FIXTURE FROM ITS BASE USING THE WEDGE TOOL (INCLUDED).
- B- USING THE HOLES ON THE FIXTURE BASE, PREPARE SURFACE FOR INSTALLATION.
- C- INSTALL (3) ANCHORS (NOT INCLUDED) INTO THE SURFACE.

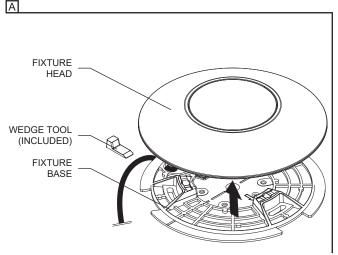



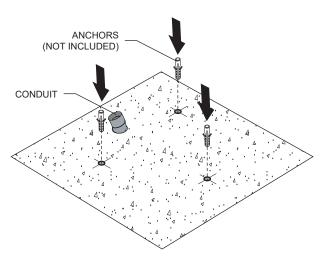


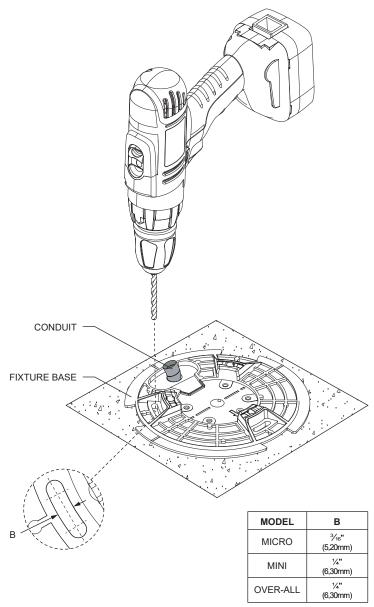

Last update: December 07, 2020


- D- FASTEN THE FIXTURE BASE TO THE SURFACE, USING (3) SCREWS (NOT INCLUDED) (FOLLOW SCREW SIZE TABLE).
- E- PASS THE FIXTURE CABLE THROUGH THE CABLE OUTLET AND CONDUIT AND MAKE ALL NECESSARY CONNECTIONS. (FOLLOWING WIRING DIAGRAM).
- F- CLIP THE FIXTURE HEAD TO THE BASE. FOR ALIGNMENT, REFER TO THE ARROWS ON THE FIXTURE HEAD AND BASE.

D

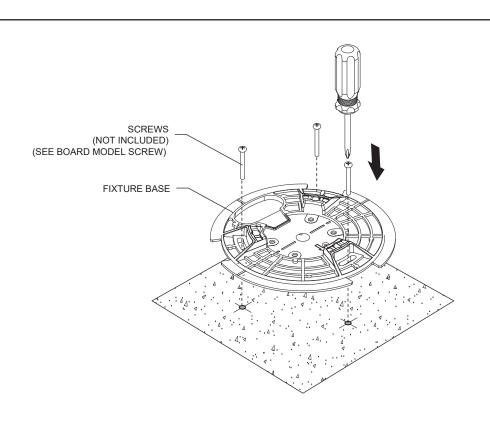

SCREW SIZE	
MODEL	SCREW
MICRO	10-32
MINI	1/4"-20
OVER-ALL	1/4"-20

E+F

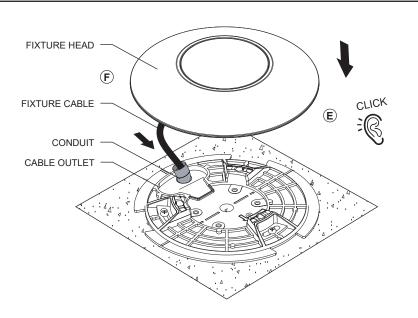



LED + RED LED - BLACK

NS-508 Last update: December 07, 2020 CL - R

## GROUND INSTALLATION ON STAKE REMOTE DRIVER (REM)

- A- UNCLIP THE FIXTURE FROM ITS BASE USING THE WEDGE TOOL (INCLUDED).
- B- 1- USE A RUBBER MALLET TO INSERT THE STAKE INTO THE GROUND.
  - 2- INSERT THE STAKE TO THE FIRST DISC TO INSURE A LEVELED POSITION WITH THE GROUND.
- C- ALIGN THE (4) FIXING HOLES UNDER THE FIXTURE BASE TO THE TOP OF THE STAKE.
- D- FEED THE CABLE THROUGH THE STAKE'S CABLE ENTRY HOLE AND USE (4) HEX SCREW (INCLUDED) OR (1) HEX SCREW (INCLUDED) TO SECURE THE FIXTURE ON THE STAKE. USE THE CABLE LOCK (INCLUDED) TO LOCK THE CABLE TO THE STAKE.

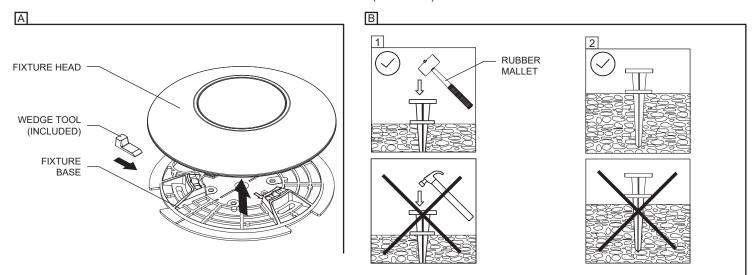

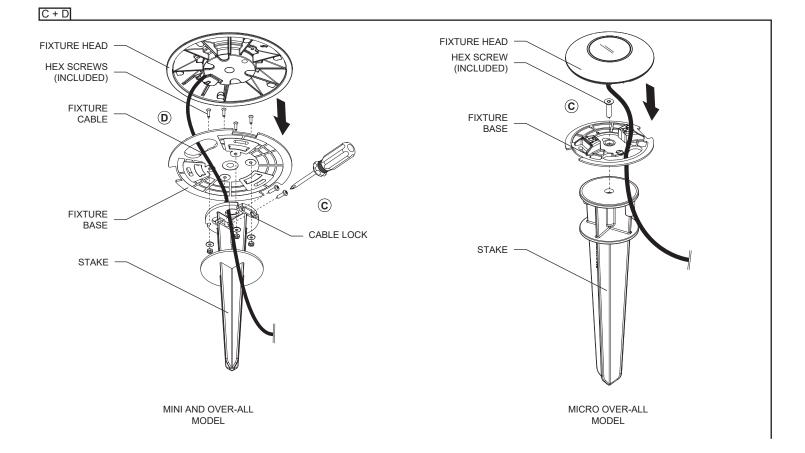


IS-508 Last update: December 07, 2020

**OVER-ALL**MODEL: \$1920, \$1921, \$1925 / \$1900, \$1901, \$1905 / \$1910, \$1911, \$1915

D- PASS THE FIXTURE CABLE TROUGH THE CONDUIT AND MAKE ALL NECESSARY CONNECTIONS (FOLLOWING WIRING DIAGRAM).

D

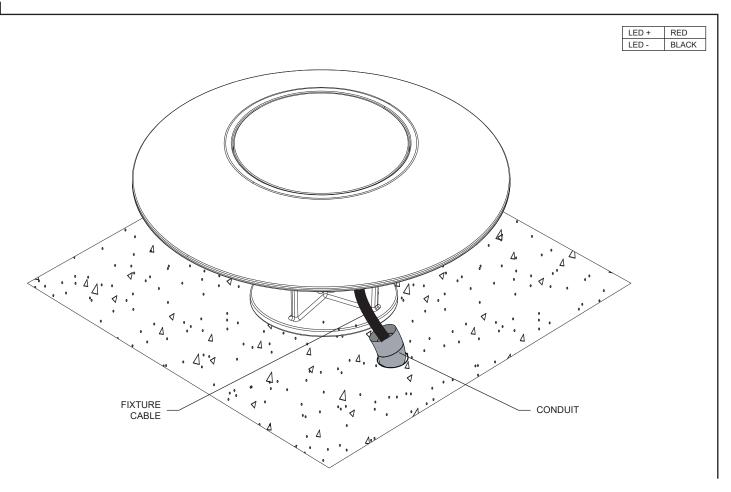

Last update: December 07, 2020